



Video on Demand

Video On Demand (6)

Movies

Subscription

3 TV Networks

Events

Free On Demand



FOODHD • 657

4:24:11

Wed Dec 2, 2020

Back to TV

INTERNET TV / PHONE
MCTV
We go the extra smile.

Passport Guide

Quick Reference Guide

INTERNET / TV / PHONE

MCTV[®]

We go the extra smile.

Digital cable the way it was meant to be

It's time to discover digital cable the way it was meant to be—television you can enjoy with tremendous convenience, variety and control.

Search fast. Save time. Record programs with ease. Find the shows you want to watch and watch them when you want.

It's time to optimize your TV experience. Spend less time looking for something to watch. Spend more time watching something great!

Time Grid

Passport Guide DVR's easy-to-use Time Grid helps you find shows in seconds. Just press the GUIDE key on your remote to display up to 2.5 hours of program listings for seven channels at a time. Use the arrow keys to navigate the grid.

Press the GUIDE key again to search for shows by title or keyword or filter listings by channel or theme.

Press the A key to sort or list programs that appear on your favorite channels or to list only HD programs or programs from custom lists that you create.


* Menu selections, images and options may vary from those shown.




Your remote control

Your remote control holds the key to navigating the features of Passport Guide. In this manual, words appearing in ALL CAPS refer to specific buttons on your remote. To navigate the guide:

- Press **▲ ▼ ◀ ▶** buttons on your remote to move the highlight.
- Press **SELECT/OK** to confirm your selection.
- Press **EXIT** to exit the guide.

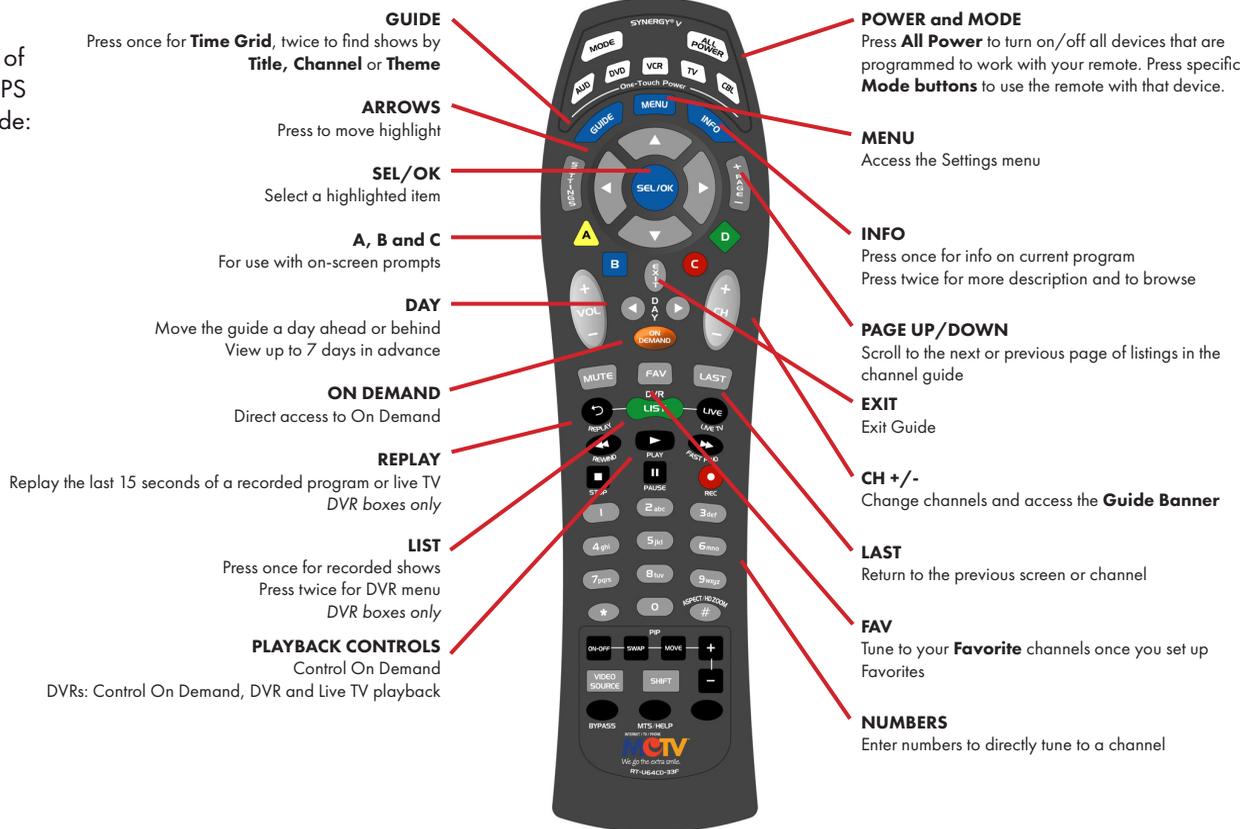


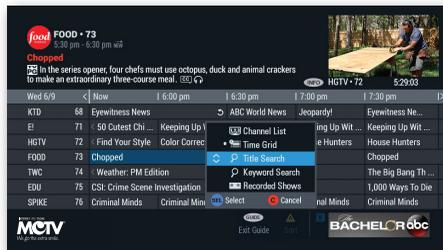

Press GUIDE twice to search.

Find Shows

Find exactly what you want to watch. Press the GUIDE key twice to begin a search for shows by title or keyword; to filter listings by channel or theme. You can quickly find programs starring a favorite actor or about a topic of special interest. You can also display a list of all of your recorded shows.

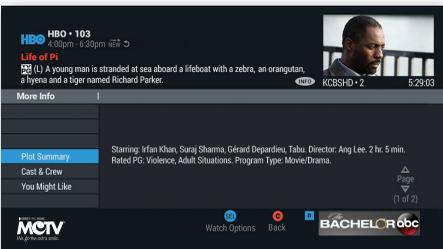


Press INFO from the Time Grid.

Program Info

With the Time Grid displayed, press the INFO key to access Plot Summary and Cast & Crew options. The Cast & Crew option displays the names of associated actors and enables you to schedule DVR recordings that feature them. You can display listings of recommended shows you might like to watch. You can also select Banner Ads to learn more about an advertised program or event.

Browse


Press the INFO key once to display information about the program you are currently watching. Press the INFO key twice to display a brief program description. Use the arrow keys to browse other channels and times without leaving the show you're currently viewing.

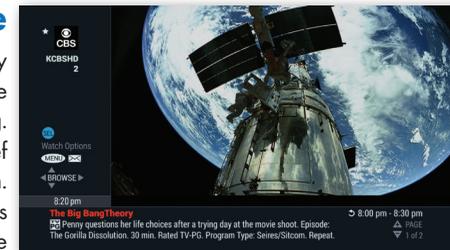

Press INFO twice to browse.

General Settings

Press the MENU key to begin to personalize your television experience. Press the A button to adjust settings for My Preferences, Parental Controls, Timers, Purchase Locks and PINs and more. Pressing Menu a second time exits you from the menu.

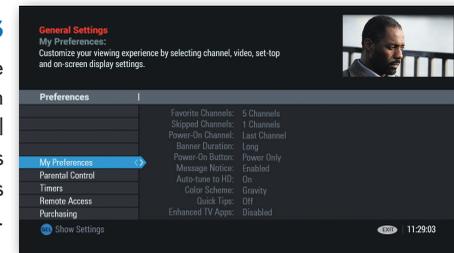

DVR

DVR¹ puts you in control. You can pause live television. Rewind and replay programs in an instant. With DVR, you can build your own personal library of programs, movies, sports and other shows to watch on your schedule.




With DVR, you can pause live TV, re-run an instant replay and even rewind or fast-forward video or live TV.


- Play
- Pause Live TV
- Instant Replay
- Fast-Forward (3 speeds)
- Rewind (3 speeds)
- Return to Live TV




Set your DVR to record a show or an entire series right from the Time Grid. Press REC on your remote to record.

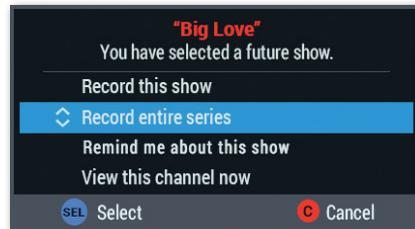

Press the DVR/LIST key to display a list of your recorded shows. Press SELECT/OK to play a program. Press A to group titles; press the INFO key to display group options.

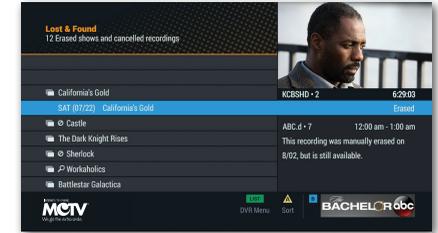

Lost & Found lets you recover² deleted shows. You may also be able to see why certain programs failed to record. Press DVR/LIST while the Recorded Shows screen is displayed to access the Lost & Found.

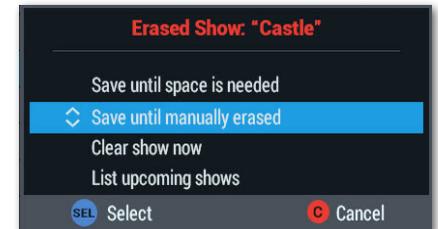


1—On Demand and DVR not available in all areas. On Demand programs may not be recorded with DVR.

2—Based on available hard disk space and other restrictions.

Video on Demand

Enjoy TV shows, movies, and more. On Demand* offers you the convenience of enjoying TV on your schedule, without ever having to leave the comfort of your couch!

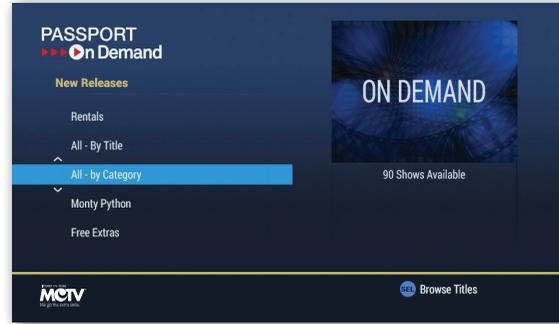

To access Video on Demand programming:

- Tune to an On Demand channel from the Program Guide, including Time Grid or Search.
- Press the ON DEMAND key once.

On Demand movies are grouped into categories. You can order HD movies, new releases, and more. Select Rentals to view recently purchased movies and shows.

You can find a movie in seconds by using the left and right arrow keys to choose a subcategory or genre. Then use the up and down arrow keys to choose a title.

- Press INFO for more information.
- Press B to buy.
- Press PLAY to play a preview.
- Press SELECT/OK to watch a purchased movie.

* On Demand not available in all areas.

Reminder timers


Never miss a program! Use the Guide to set timers to remind you that your favorite program is about to begin.



When in the Guide, highlight a program airing in the future. Press SELECT/OK and use the ◀ ▶ buttons to choose **Set Event Timer** or **Remind Me About This Show**. A reminder timer ⌚ will appear next to the title and the show will be highlighted in the grid guide.



The **Channel Banner** displays a reminder message one minute before the program starts. Press SELECT/OK to select the program or simply wait for the set-top box to tune to the program automatically.

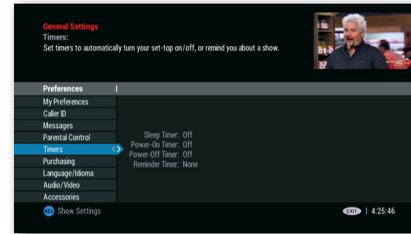

Review, modify or clear timers.

Non-DVR boxes: Press Menu to access the **Settings Menu**. Press ▲ ▼ buttons to highlight Timer Review and press SELECT/OK.

DVR boxes: Press Menu, then A to access **More Settings**. Use the ▲ ▼ buttons to highlight Timers.




The **Timer Review** will list each timer scheduled.

Non-DVR boxes: To change the status of a timer, press the ▲ ▼ buttons to highlight a timer, then press the ◀ ▶ buttons to select the type of change. Press C to exit.

DVR boxes: Press SELECT/OK to modify the timer and C to Cancel.

INTERNET / TV / PHONE

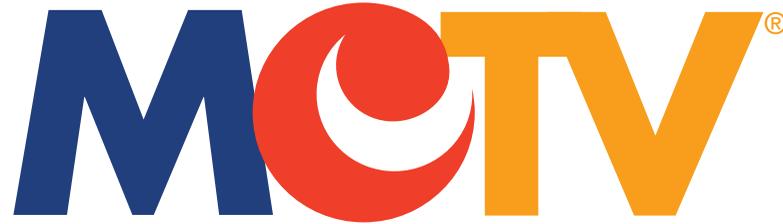

We go the extra smile.

Stark County: 330-833-4134
Wayne County: 330-345-8114

Don't just watch TV. Experience it with Passport Guide DVR.